


SEALING FIXING POINTS & HOLES THROUGH THE ROOF

1. Vehicles with through holes without threads at the fixing points. (eg MB-Sprinter)

Make sure the through holes are PROPERLY sealed. The best way to do this is to apply Sikaflex to both sealing washers. Additionally, you should apply a little Sikaflex to the inside and outside of the hole in your roof. The sealing washer should completely cover the slot in the bracket. This step should be done very carefully, otherwise leaks could occur in the roof of the vehicle.

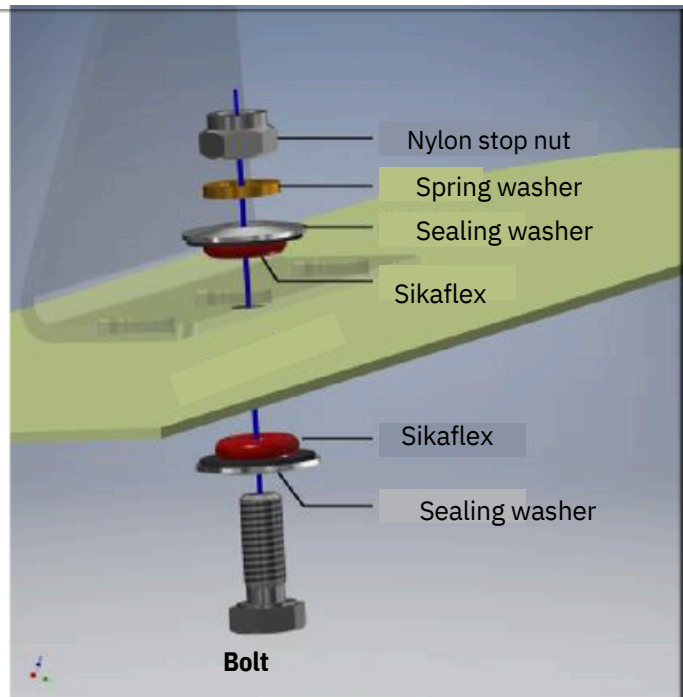

2. Vehicles with threaded holes at the points of fixing. (eg Ford Transit)

Make sure the original threaded holes are PROPERLY sealed. The best way to do this is to spray a ring of Sikaflex around the threaded hole and over the sealing washer. The sealing washer should completely cover the bracket slot. This step must be carried out with great care, otherwise leaks could occur at the roof of the vehicle.

